## Quick Reference

The PowerSeries Neo Alarm System uses shortcut keys to access options or features on all models of keypads. When using an LCD keypad, the PowerSeries Neo Alarm System additionally uses a menu based

**Function Keys** 

Stay Arm

Away Arm

Reset Sensors

**Ouick Exit** 

Chime

 $(\Delta)$ 

1

Emergency Keys

Fire Alarm

Panic Alarm

Section

4.1.1

4.1.2

4.1.3

4.6

4.1.4

411

4.4

4.4

4.4

4.4.1

4.4.1

8.1.2

8.1

8.1.8

8.1.9

7.1.1

5.3

9.1

3.1.4

8.1.10

Medical

Alarm

navigation system. The scroll 🔇 🕞 keys can be used to [Scroll] through the list of options contained

within the current menu. For more information on keypads see 2 "Understanding your Keypad Display".

Lookup detailed information on any of the listed actions using the accompanying Section number. **NOTES:** Some features must be enabled by installer.

Bypass Groups are not permitted in UL listed installations. [\*] - If configured by installer

Status Lights

Ready - Indicates system normal. Must be on to arm system. All zones must be secured or bypassed and the system disarmed for this light to activate.

Armed- Indicates system is armed. If the Ready light and the Armed light are

both on, an Exit Delay is in progress.

Δ

Action

Away Arm

Stay Arm

Night Arm

No-Entry Arming

Quick Arm/Quick Exit

Abort Arming Sequence

Bypass Individual Zones

Bypass All Open Zones

Program Bypass Group

**Common Functions** Set Time and Date

Load Bypass Group

Turn Chime ON/OFF

Change Brightness

Change Contrast

Add/delete User

View Troubles

View Alarms

Buzzer Volume

Reset Smoke Detectors

Perform System Test

Recall Last Bypass

Clear Bypass

Disarm

**Arming and Disarming** 

**Trouble** - On indicates a system malfunction or tamper. Flashing indicates that the keypad has a low battery condition. Follow the instructions displayed or enter [\*][2] to view trouble. Correcting the trouble turns off the indicator. AC Power - Indicates AC Power is present. The AC Power light will turn off when AC is absent.

Press

[Access Code]

(\*) (D)

[Access Code]

[3 Digit Zone #]

 $(\star)$ 

\*)(

9 (9) (8)

9 9 1 OR

(9)(9)(9)OOOO

for 2 seconds + [Access Code\*]

for 2 seconds + [Access Code\*]

+ [Access Code\*]

Bypassing - All bypass commands begin with + [Access Code\*]

[3 digit zone #s] + 9 9 5 OR

When armed in stay mode + [Access Code\*]

[Scroll] Bypass Options + + + [Scroll] Clear Bypasses + +

[Scroll] Bypass Options + + + | Scroll] Bypass Group + +

6 [Master Code] + 0 1

+ [Access Code\*] OR 🚇

\* 6 [Master Code] + 1 2 + 3

\* 6 [Master Code] + 1 3 + 0

6 + [Master Code] + 0 4 + 3 >

\* 5 + [Master Code] + [Access Code] + 1

2 + [Access Code\*] + < >

\* 3 + [Access Code\*] + 4 >

(2) OR (\*) (2)

[3 digit zone #s] + [Scroll] Bypass Options + + + [Scroll] Prg Bypass Group + +