

NAPCO GEMINI SERIES TROUBLE CODES AND CONDITIONS

E 01-00 - A/C POWER FAILURE
E 02-00 - SYSTEM LOW BATTERY
E 03-00 - COMMUNICATION FAILURE
E 04-NN - RF TRANSMITTER SUPERVISORY FAILURE
E 05-NN - RF TRANSMITTER LOW BATTERY
E 06-NN - RF RECEIVER RESPONSE TROUBLE
E 07-00 - DOWNLOAD ATTEMPT FAILURE
E 08-00 - TELCO LINE 1 FAILURE
E 09-00 - SYSTEM COLD START (NO PANEL PROGRAM)
E 10-NN - BURGLARY KEYPAD RESPONSE TROUBLE
E 11-NN - BURGLARY KEYPAD TAMPER
E 12-NN - BURGLARY EZM RESPONSE TROUBLE
E 13-NN - BURGLARY EZM TAMPER
E 14-NN - RELAY BOARD RESPONSE TROUBLE
E 15-NN - RF TRANSMITTER TAMPER
E 16-NN - RF RECEIVER JAMMED
E 17-NN - RF RECEIVER TAMPER
E 18-NN - WIRELESS KEYFOB LOW BATTERY
E 19-00 - USER PROGRAM MEMORY ERROREM FIRE
E 20-00 - DEALER PROGRAM MEMORY ERROR
E 21-00 - SYSTEM SHUT DOWN
E 22-NN - SENSOR WATCH FAILURE
E 23-00 - BURGLARY BUS FAILURE
E 24-00 - SERVICE MESSAGE
E 25-00 - TELCO LINE 2 FAILURE
E 26-00 - SYSTEM GROUND FAULT
E 27-00 - PRINTER FAILURE
E 28-00 - FIRE BUS FAILURE
E 29-00 - FIRE FBS BOARD TROUBLE
E 30-NN - FIRE EZM AUX POWER FAILURE
E 31-NN - FIRE EZM RESPONSE TROUBLE
E 32-NN - FIRE KEYPAD RESPONSE TROUBLE
E 33-NN - FIRE EZM TAMPER
E 34-NN - FIRE KEYPAD TAMPER
E 35-NN - SUPERVISORY RELAY TROUBLE
E 36-NN - FIRE EZM GROUND FAULT
E 37-NN - FIRE EZM AC FAILURE
E 38-NN - FIRE EZM LOW BATTERY
E 39-00 - RF RECIEVER CAPACITY ERROR
E 40-00 - RF DUAL TEC SELF TEST FAILURE
E 41-00 - SYSTEM FIRE TROUBLE
E 51-00 - ALARM SUPERVISORY FAILURE
E 58-00 - TELEMETRY TROUBLE
E 59-00 - TELEMETRY FAILURE
E 66-00 - CLEAN ME SMOKE DETECTOR DIRTY
E 99-00 - KEYPAD PANIC WIRE TROUBLE

NN = DEVICE OR ZONE NUMBER

ALL OTHER E MESSAGES ARE UNDEFINED